


## Architectural Conservation— Degrees of Intervention

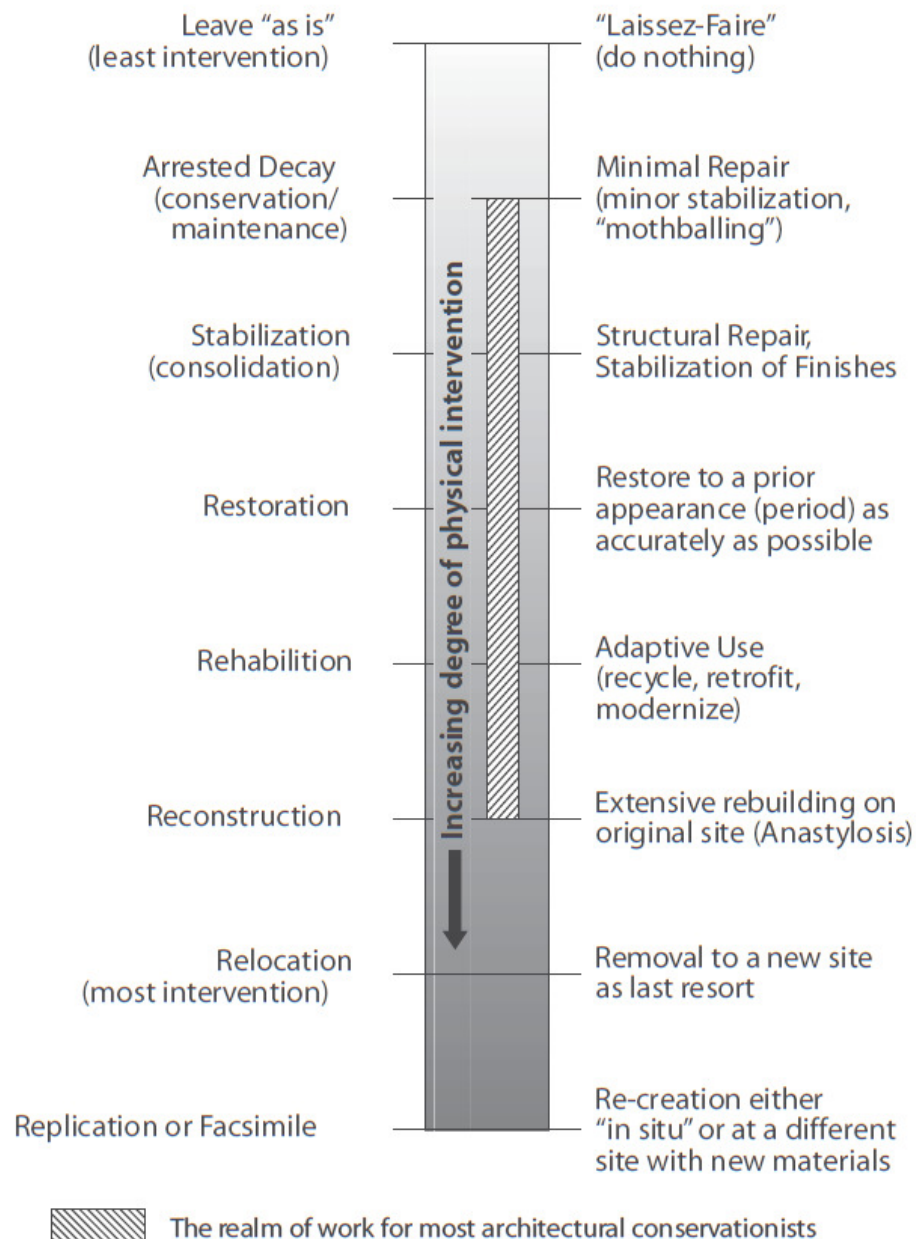

### Considerations:

#### 1. Conservative vs. Radical Approach

**Conservative**— more easily reversed, conserves more authenticity, and often costs less

**Radical**—Less easily reversed, affects the authentic quality of the site, and is usually more expensive

#### 2. Objective: Finding the "right" degree of intervention; the conservative approach is usually safer and better

**Chart 8-2 Architectural Conservation: Degrees of Intervention**